




INSTALLATION INSTRUCTIONS P/N 23691

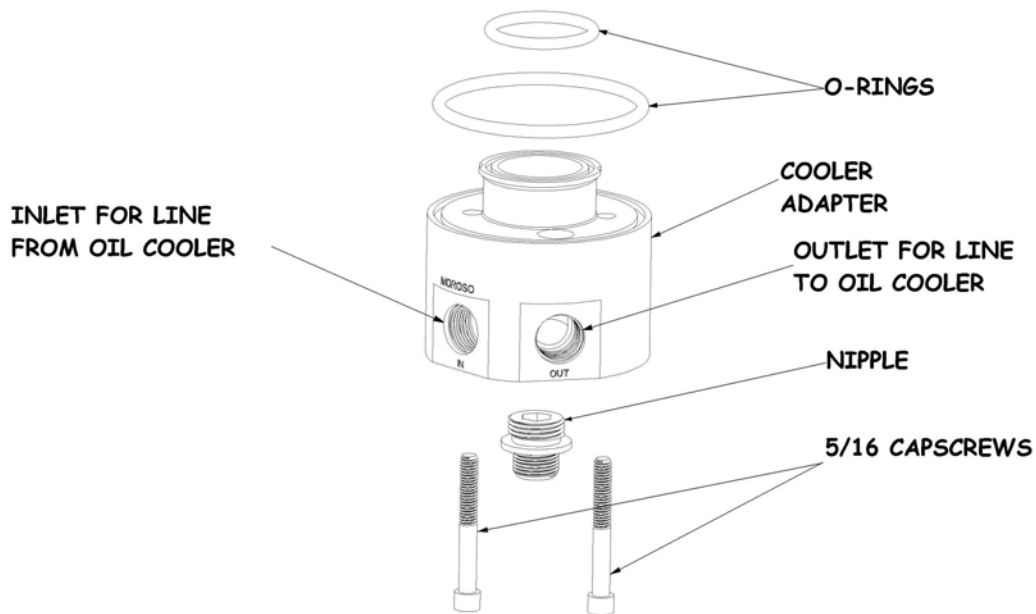

Remove factory oil filter adapter from engine. Assemble components as shown in the above illustration. Make certain to use #10AN fittings and o-rings to plumb your oil cooler. This adapter has no bypass valve for the oil filter.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437-2116
Phone: (203) 453-6571 • Fax: (203) 453-6906