



SHOW CAR LOOM KITS INSTALLATION INSTRUCTIONS

No. 72167 – (Black)


No. 72168 – (Red)

No. 72169 – (Yellow)

No. 72170 – (Blue)

Secures spark plug wires to keep them protected from crossfire and hot engine components.

Fits Moroso and other plug wire up to 8mm in diameter. Slight modifications required to fit larger diameter wire or wire fitted with insulating sleeve.

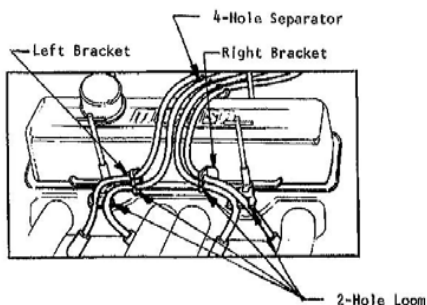

1. Install chrome-plated brackets with looms attached to valve cover mounting locations as shown in diagram above. Use stock valve cover fasteners or Moroso Valve Cover Wing Nuts to hold them in place.
2. Position 4-hole wire separator as shown above.
3. Simply “snap” wires into looms and separators—a silicone spray lubricant helps ease the wires into the openings.
4. When using wire larger than 8mm or Moroso Insulating Sleeve No. 72000, use a file to remove the “nubs” formed into the wire openings of the plastic looms/separators.

**For Technical Assistance, Call Moroso’s Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com