



## BIG BLOCK CHEVY LOOM KITS INSTALLATION INSTRUCTIONS

P/N 72175 Blue


P/N 72176 Red

P/N 72177 Yellow

P/N 72178 Black

Secures spark plug wires to keep them protected from crossfire and hot engine components.

Fits Moroso and other plug wire up to 9mm in diameter. Slight modifications required to fit larger diameter wire or wire fitted with insulating sleeve.

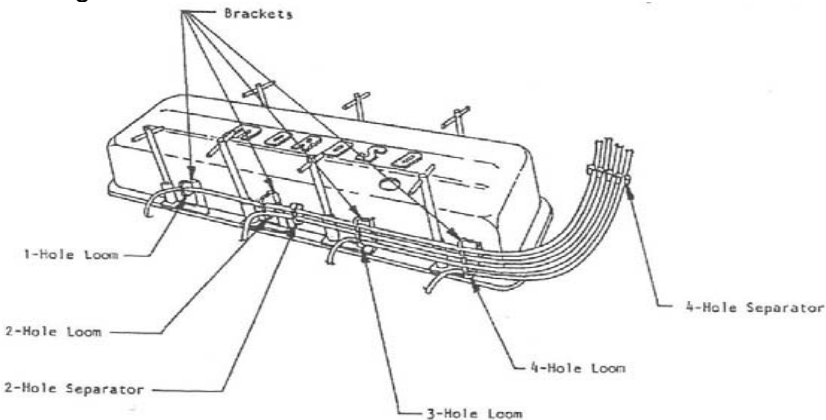

1. Install chrome-plated brackets with 1-, 2-, 3- and 4-hole looms positioned as shown in diagram above. Use stock valve cover fasteners or Moroso Valve Cover Wing Nuts to hold brackets in place.
2. Position 2- and 4-hole wire separator as shown above.
3. Simply “snap” wires into looms and separators—a silicone spray lubricant helps ease the wires into the openings.
4. When using wire larger than 9mm or Moroso Insulating Sleeve, use a file to remove the “nubs” formed into the wire openings of the plastic looms/separators.

**For Technical Assistance, Call Moroso's Tech Line at  
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC  
80 CARTER DR • GUILFORD, CT 06437  
Phone: (203) 453-6571 • Fax: (203) 453-6906

Rev. A  
051813

Visit Us At [www.moroso.com](http://www.moroso.com)

72175INST